THE 130 60-POINT

Laying-up checklist

PBO experts offer their top tips to keep your boat and gear in good condition over the winter months

Checks while afloat



Remember to leave fresh oil in the engine over winter

- Problems which are blindingly obvious afloat can be virtually impossible to locate ashore, so take the opportunity to mark any leaks and creaks ready for work ashore. Hull/deck joins, cleats, stanchions and other deck fittings are typical culprits.
- The same applies to the engine, especially the stern gear and engine mounts. It's much easier to locate problems when the engine is running in the water.
- If your boat will be lifted onto a trailer, take the chance to service the hitch, hubs, brakes and tyres without the boat in the way.



Inserting a rag in the exhaust outlet prevents creatures and moisture entering the pipe

If you can, service the engine now. This allows the engine and filters to be

thoroughly coated with fresh oil and corrosion inhibitors, and distributes antifreeze through the cooling system. Change the oil when the engine is warm.

Stuff a rag into the air intake and exhaust pipe.

A bucket over the

propellers will protect heads and hands from the sharp edges of the blade.

■ If you aren't planning to take the rig down, send someone up the mast to check swages, sheaves and angles in the rigging wire, and to check the electrics, in case you find something that requires taking it down. The yard would rather take down the mast at the same time as lifting the boat than be asked later.



Send someone up the mast to check swages, sheaves, and angles in the rigging wire

Checks before lift out

- Try to organise some time alongside with easy access to the car. It's much easier to unload the boat when you're not climbing up and down a ladder.
- Take off the sails. If you have access to a hose, you can quickly wash them off with fresh water, hoisting a few feet at a time. Make sure you sluice



If you're not going sailing, remove the sails to prolong their life

your furling gear too.

- Check and replace the water pump impeller if it shows sign of ageing. Don't forget to install a new gasket on the pump faceplate.
- Remove the dodgers and spray hood to reduce windage for the lift.
- Remove any sheets that could get tangled, and tidy up your halyards.
- Empty your water tanks while afloat it's much more sociable than creating a flood in the boatyard. Make sure you drain the tanks, pipes and calorifier to prevent the water inside of them freezing if it gets too cold. Add lemon juice or Milton in your water tanks to keep them fresh.
- Take off gas bottles and petrol cans to minimise fire hazards. If you can't take the gas bottle home, make sure it's



Burn off any gas and disconnect the bottle

disconnected and it can't leak.

Some experts argue that it's best to keep your diesel tanks

topped up with a dose of diesel bug treatment to inhibit condensation and corrosion. Others argue against this, due to the contamination caused by diesel which has been left in the tank for a while (see page 44).

fresh i

- Remove or retract your transducers and fit the blanking caps-transducers can be damaged by the crane's lifting straps.
- Make sure the lifting points are clearly marked this will help the yard hoist your boat quickly and on the level.
- Lash down or remove the boom, and any other loose objects that could get in the way as the boat is lifted.
- If you plan to drop the mast, disconnect all running rigging and electrical cables attaching it to the deck, and ease off the bottlescrews to make the yard's job quicker.
- Even if the mast is staying up, some boats will need the backstay to be eased to clear the crane.
- Pump the bilges, then switch off the pump. The yard staff won't thank you if your automatic pumps showers them with stagnant water as they lift the boat, and it will save your batteries.

On the hard

- Pressure wash below the boat's waterline. Fouling sticks hard once dry, so this is a great opportunity to remove it. Most yards offer pressure-washing as part of the service, and it's worth taking advantage of their powerful equipment.
- Wash your topsides and decks to shift the salt. It all helps to keep the boat dry.



Removing lines over winter and washing them will prevent mould

- Remove the running
- rigging, replacing where appropriate with mouse lines. Take all your lines home and rise them in fresh water and a mild detergent.
- Rinse out the salt from your blocks, furling gear, mainsheet

se of diesel hibit crrosion. st this, due caused by en left in the page 44). tyour the sducers can crane's

ting points
-this will
our boat
evel.
eve the
loose
et in the

the mast, ne rigging attaching se off the a the yard's

staying need the to clear then

The yard if your owers later as lat will

ow the ing sticks is a great end it. Most washing and it's ge of their

s and Litall tdry,



ter and nt mould

ere se lines, ne and ar and a

rom your ainsheet traveller and genoa tracks with fresh water and check for wear.

Remove any on-deck items such as the liferaft and Danbuoy which will deteriorate when left outdoors. Either take them home or store them inside the boat.

■ Ensure the scuppers are clear to allow for easy drainage. ■ Drain any water from the heads and holding tanks, and run some washing-up liquid through to keep them fresh and

prevent freezing.

Make time to pump the heads through with fresh water

■ Run the engine to pump fresh water through the raw water cooling circuit—use a bucket or a hosepipe. If you have a closed-circuit cooling system, check and top up the antifreeze. Boats with raw water-cooled engines should have the engine flushed through with a mix of fresh water and antifreeze.



Ensure the engine is topped up with enough antifreeze

■ Disconnect the batteries and connect them to a solar panel or trickle-charger. If possible, take them home to keep them away from frost.

■ Make sure lead-acid batteries are topped up to the correct level with de-ionised water.

■ Check all the sheaves in the mast are running freely and are undamaged. If necessary, drive the shaft pin out and check—they often wear on the inside of the sheave. If they won't turn at all, first try a kettle of hot water—it's more effective and less messy than WD-40.

■ Once sheaves are moving, use a dry silicone lubricant to keep them that way.



If you can, disconnect your batteries and take them home

■ Clean the inside of the boat with fresh water to remove salt deposits.

■ For preference, remove all soft furnishings and take them home. If this isn't possible, make sure you prop up the berth cushions so that air can reach both sides.



Removing cushions and mattresses will stop moisture damaging them

■ Flush through your seacocks with fresh water to remove the salt. If you have traditional tapered seacocks, remove the barrels to prevent

them seizing.

■ Ensure the boat is well ventilated – it's good to lift some of the boards in the cabin sole to let air reach the bilge. You could run a dehumidifier to

keep the damp at bay.
Covering the boat is a good way to keep your timber in good condition, and the boat is dry for working. If you have a wooden boat, a cover is a must.



Try not to let tarpaulins rest against the topsides, it can lead to a scuffed hull

■ Do not tie the cover to any supporting legs, trestles, chocks or struts—if the cover flogs in a gale, it may dislodge the support with disastrous results.

Ensure there is adequate ventilation.

■ Check the boat carefully for leaks which might let the rain in. The idea is to ensure a dry boat, but encourage ventilation.

Moving parts such as spinnaker pole pins should be lightly oiled or greased to prevent corrosion.

■ Take easily removable objects such as the outboard and electronics home to prevent theft. Thieves have even been known to steel propellers.

Check your stern gear and rudder bearings for play or visible wear.

■ **Take your anchor** and chain out of the locker to prevent it from rusting up.

■ Check props or cradle for security before leaving the boat. Make sure to lock the ladder to the cradle. A doormat at the ladder's base will help keep decks clean.

■ Remove all food from the boat to deter rats and mice and try and make it as hard as possible for pests to get on board the boat.



Remove from the boat any food that's open or perishable

Staying afloat

■ Try to secure a snug, sheltered berth. If you are on a pontoon, choose the leeward side from the prevailing wind.

■ Deploy plenty of heavyduty fenders. Some people even wrap old tyres in canvas, as conventional fenders can pop under pressure of a gale. ■ Use a fender cloth on your

topsides to minimise chafe.

Double up all your mooring lines, and protect them from chafe. Plastic hose through the

fairleads is ideal.

Clean the side of the boat to remove salt deposits and help drying

If possible, remove all the soft furnishing to avoid mould and mildew growth.

■ Take off your sails and stow them below decks.



Drain fresh water tanks and leave the taps open

Drain your fresh water tanks.

Service your engine to renew corrosion inhibitors and antifreeze.



Ventilation in all forms is good for a sweet smelling boat

■ Make sure the boat is well ventilated. Open lockers and lift cabin sole hatches to help air circulate. You could also run a low-level heater to help keep the boat dry.

■ Visit your boat at least once a month and on each visit, sponge out any accumulated water, Check first if it is fresh or salt water.



Stop moisture damage by keeping the interior as dry as possible

■ Ensure any lines or poles which are left on the deck are lifted up to prevent them from collecting dirt or going green.



Keep lines off the deck to stop them festering

■ Whether you are leaving your boat on the hard or in the water, ensure you have adequate insurance coverage for the winter months.